

INSTRUCTIONS

Pulsar

THE TIME COMPUTER[®]

AUTO/SET MODELS

PLEASE NOTE

As part of its continuing Customer Service, this Time Computer has been equipped with the Pulsar Auto/Set System which eliminates the need for setting magnets. Please read the following instructions carefully before attempting to reset any function.

USE Above RW-42

This PULSAR® model has a new and simplified setting system. Setting is accomplished solely by use of the buttons, while the timepiece is on the wrist. Each function is set independently. Month and date settings are initiated with the left command button; hours, minutes, and seconds with the right command button. When first setting your Pulsar, the following sequence is recommended:

1. Month
2. Date
3. Hour and AM/PM Indication
4. Minute and Second

TO SET MONTH

Press Month/Date (upper) button three times in rapid succession to activate the month re-set mode. Release button, then pause a second or two. While display is still lit, press button again and hold, to advance month figure to desired setting. Release button when month setting is correct — the display will turn off automatically.

NOTE: The re-set display will remain lit for five seconds after upper button is released. If you want to change the date at this time, you can do so by pressing Time (lower)

command button while the display is still lit. Release button when date setting is correct — the display will turn off automatically, indicating that the correct month and date are "locked" into your Pulsar.

TO SET DATE AND AM/PM INDICATOR

Press Month/Date (upper) button three times in rapid succession to activate the date and AM/PM re-set mode. Release button, then pause a second or two. While display is still lit, press and hold the Time(lower) button to advance date figure to desired setting. The AM/PM indicator will flash alternately with each successive change. Release button when date setting and AM/PM indication are correct — the display will turn off automatically.

NOTE: The re-set date display will remain lit for five seconds after the button is released. If you want to change the month at this time, you can do so by pressing the Month/Date command button while the display is still lit. Release button when month setting is correct — the display will turn off automatically, indicating that the month, date, and AM/PM indications are "locked" into your Pulsar.

TO SET HOUR

Press Time (lower) button three times in rapid succession to activate the hour re-set mode. Release the button, then pause a second or two. While display is still lit, press and hold the Month/Date (upper) button to advance hour figure to desired setting. Release button when hour setting is correct — the display will turn off automatically.

NOTE: The re-set hour display will remain lit for five seconds after the button is released. If you want to change minute setting as well, you can do so by pressing Time button while the display is still lit. Release button when minute setting is correct. The display will turn off automatically, indicating that the hour and minute re-sets are completed, and that the seconds display is "locked" in at :00. Nothing will happen at this time until you press the Time command button again, which "unlocks" the seconds and re-activates the computer. See p. 5 for second setting procedure.

PRELIMINARY PROCEDURE FOR SETTING MINUTE AND SECOND

First choose an accurate time source such as a radio or TV

signal, or your local telephone company. To allow for precise synchronization, select a minute and second setting to co-incide with an *up-coming* signal. Keep in mind that any minute re-set — even a 1 minute adjustment — will automatically recycle and “lock” in the seconds at :00.

TO SET MINUTE AND SECOND

1. Minute. Press Time (lower) button three times in rapid succession to activate the minute re-set mode. Release the button, then pause a second or two. While display is still lit, press the button again and hold, to advance the minute figure to desired setting. Release button when setting is correct — the display will turn off automatically. Nothing will happen at this time until you press the Time button again, which “unlocks” the seconds and re-activates the computer. See p. 5 for second setting procedure.

NOTE: The re-set minute display will remain lit for five seconds after the lower button is released. If you want to change hour setting at this time, you can do so by pressing the Month/Date button while the display is still lit. Release button when hour setting is correct — the display will turn off automatically, indicating that hour and minute re-sets are completed, with the seconds display “locked” in at :00.

Nothing will happen at this time until you press the Time command button again, which "unlocks" the seconds and re-activates the computer. See following paragraph for second setting procedure.

2. Seconds. First, advance the minute display at least one figure to activate the second re-set mode. Advancing the minutes — even just one minute — automatically re-cycles the seconds and "locks" them in at :00.

When the minute re-set coincides with your upcoming time signal or master time source, press the Time command button *once* to "unlock" the seconds, beginning at :01. Your computer has now been re-activated and is functioning normally.

A FINAL REMINDER

Remember the each function can be re-set *independently*, as well as in related *combinations* of Month/Date *OR* Hour/Minute, as indicated previously. Should you inadvertently press *either* button three times in rapid succession, the display will light, hold for five seconds, then go out. No functions will change and you will not have affected any setting, nor altered the performance of your Pulsar in any way.